
TECHNICAL INSTRUCTIONS

FOR

SPECIAL SERVICE CAMPAIGN 70F (SAFETY RECALL)

2007 AND EARLY 2008 MODEL YEAR TOYOTA CAMRY ALL WEATHER FLOOR MAT

I. OPERATION FLOW CHART

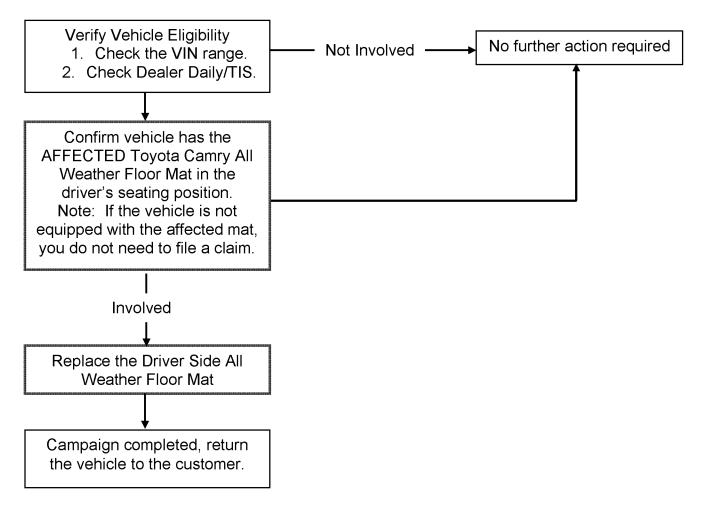

II. IDENTIFICATION OF AFFECTED VEHICLES

A. AFFECTED VINS

- Check Dealer Daily/TIS to confirm the VIN is involved in this SSC. This will verify the
 vehicle is affected and has not already been completed prior to dealer shipment or by
 another dealer.
- TMS warranty will not reimburse dealers for repairs conducted on vehicles that are not affected or were completed by another dealer.


III. PREPARATION

A. PARTS

Part Number	Part Description	Quantity
PT908-0307F-02	Camry AWFM Black (Driver's Side)	1
PT908-0307F-14	Camry AWFM Brown (Driver's Side)	1

B. TOOLS

[APG]




IV. WORK PROCEDURE

A. CONFIRM THE VEHICLE HAS THE AFFECTED ALL WEATHER FLOOR MAT

Confirm if the *original* driver side All Weather Floor Mat (see the diagram below for key areas to aid in identification of the original vs. the newly designed mat) is present in the vehicle.

- If the original mat is NOT present, no action is necessary.
- If the original mat IS present, proceed to step B.

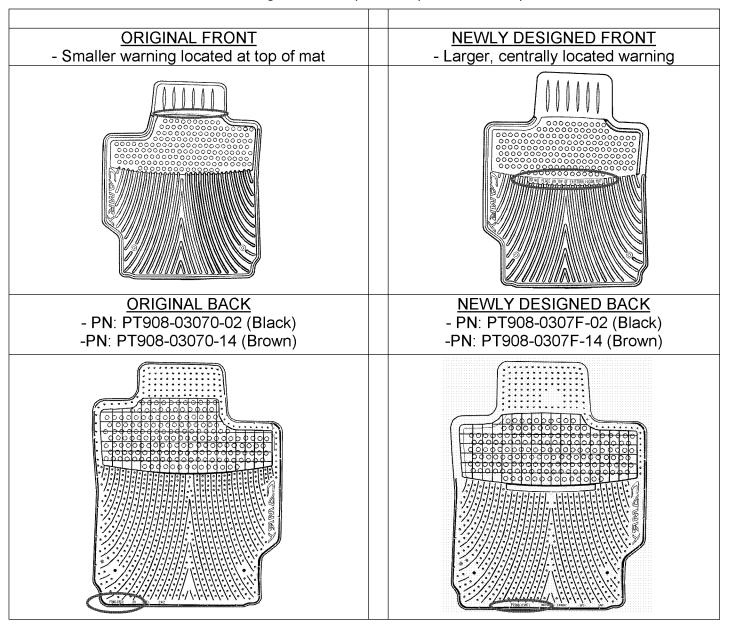

B. REPLACE THE AFFECTED DRIVER SIDE ALL WEATHER FLOOR MAT WITH THE NEWLY DESIGNED ONE

IMPORTANT: MAKE SURE THE RETAINING HOOKS (CLIPS) ARE PROPERLY INSTALLED AND SECURED TO THE VEHICLES CARPET AND THE ALL WEATHER FLOOR MAT.

V. RECALLED PARTS RECOVERY

The returned floor mats will be placed on Warranty Parts Recovery and dealers will

[APG]

